

IMPORTANT INFORMATION

Note! Please visit www.jeld-wen.com for additional resources and complete instructions. We have How-To videos and written Product Guides available for most products. Contact us for more information.

INCLUDED PARTS

- 1 - Adjustable Sill Riser

PRECAUTIONS AND SAFETY


- Use proper and safe equipment and protective gear as necessary.

NEEDED TOOLS


- Hook tool

INSWING ADJUSTABLE SILL RISER REPLACEMENT


1. Use a hook tool to pry up lip of sill cap.

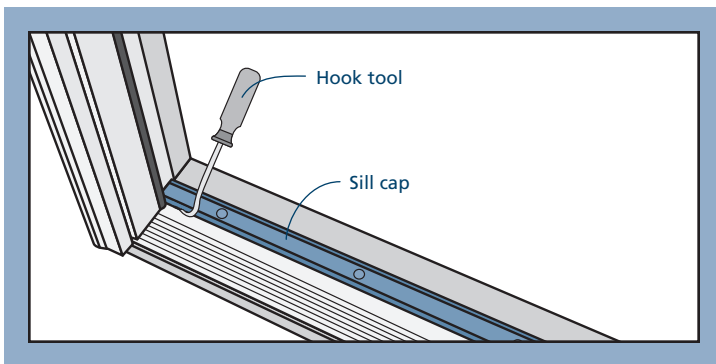

2. Pull up and out to disengage the sill cap and work your way down the threshold to remove completely.

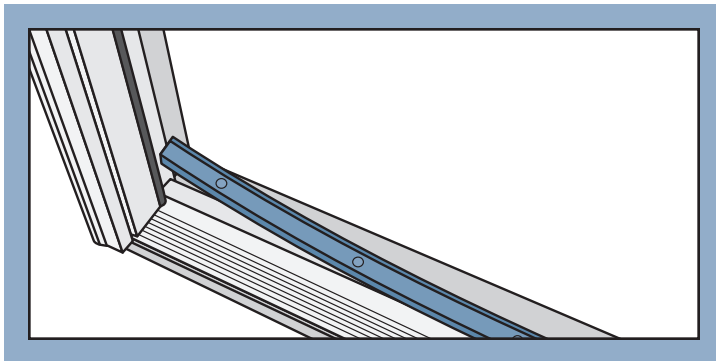

3. Measure opening of the door or you can measure the removed sill cap. Cut new sill cap to this measurement.
4. Place end of new sill cap in the corner and press back into place working your way down the length of the sill cap.

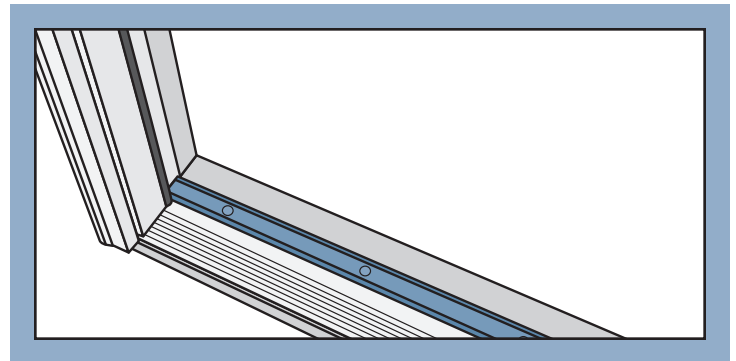

The advice offered herein can be done by a homeowner with some mechanical aptitude. If you are unsure, it is recommended that you hire a trained service provider such as a competent and licensed construction contractor or building professional. JELD-WEN disclaims any and all liability associated with the use and/or provision of these instructions. Any reliance upon the information or advice is at the risk of the party so relying. The information contained herein may be changed from time to time without notification.